

# TROUBLESHOOTING & MAINTENANCE



For more information contact...

## WOODFORD MANUFACTURING COMPANY

2121 Waynoka Road, Colorado Springs, Colorado 80915 • Phone: (800) 621-6032 • Fax: (800) 765-4115

To view our complete product line visit: [www.woodfordmfg.com](http://www.woodfordmfg.com) or email: [sales@woodfordmfg.com](mailto:sales@woodfordmfg.com)

A Division of WCM Industries, Inc.

Rev 07/12 Form No. TM19.102

## Model 19 Freezeless Wall Faucet

### How A Frost-Proof Faucet Works

Fig 1

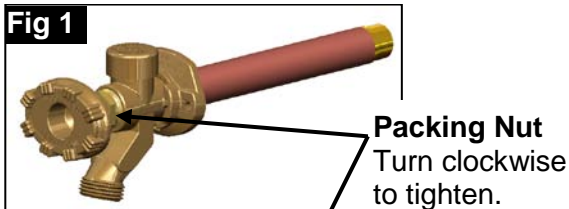


Fig 2

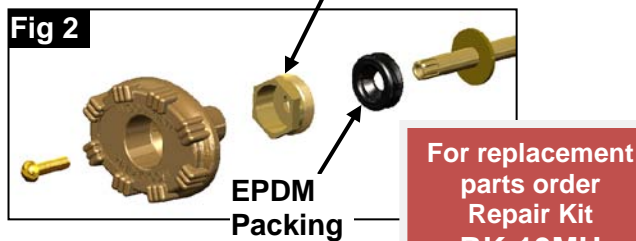


Fig 3

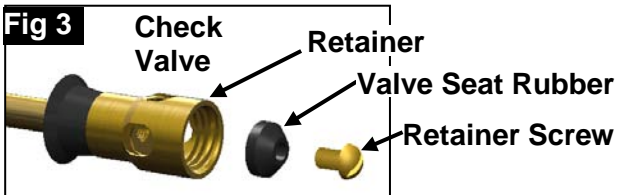


Fig 4

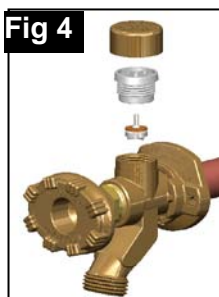


Fig 5


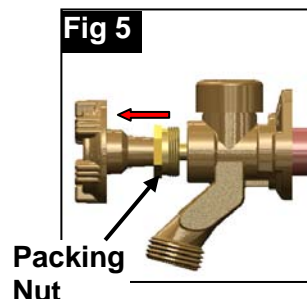


Fig 6

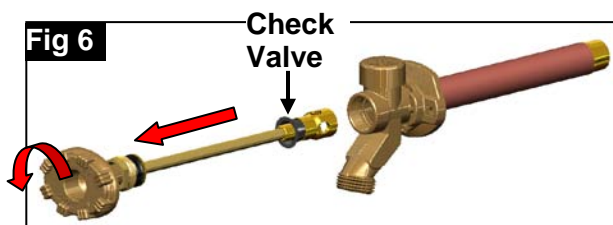

- **Packing leak: Faucet leaks from around the operating stem when it is on**  
The hex **Packing Nut** (30059) will occasionally need to be tightened to stop a packing leak. (**Fig 1**) Without removing any parts, tighten the packing nut behind the handle until snug and the leak stops. Persistent leaks will require a new **EPDM Packing** (30560) (**Fig 2**).
- **Faucet will not shut off: Water runs or drips out nozzle when the faucet is off**  
The **Valve Seat Rubber** (30008) is worn or damaged and needs to be replaced or the **Retainer Screw** (30804) is loose. (**Fig 3**) Follow the instructions below on how to remove the **Operating Rod**. (**Fig 4 & 5**) If this does not fix the leak, the faucet may have a damaged seat and the faucet will need to be replaced.
- **Faucet leaks from the vacuum breaker, on top of the faucet, when the faucet is on.**  
Vacuum breaker is fouled or damaged. (**Fig 4**) Pry off plastic cap and use pliers to remove the vacuum breaker body. Check for fouling or replace with vacuum breaker float kit (RK-19VB).
- **Valve Stem Assembly - Operating Rod Removal**  
To remove the operating rod from the faucet, shut off the water supply, loosen the handle and back out the **Packing Nut** (**Fig 5**). Use the handle to turn the rod counterclockwise until the rod becomes disengaged from the valve seat. Use a small screwdriver to pry the packing loose. Pull the rod assembly out of the faucet. (**Fig 6**) The rod may have a check valve that will add resistance to removal. Use a swift pull to disengage it.